

## INITIALIZE THE PROGRAMMING CODE(123456)AND the Card SETTING MANAGEMENT

Step 1: Power off ,the RST(SI) wire jumper hat connect to 2/3 interface ,re-up electricity , 3 long buzz then the Green Light fast flash,the programming code restore to Factory default

Step 2:(If No need to manage Cards,This step can be omitted):Continual to read two blank Cards(the first one is Added Card,the second one is deleted card),Red light flash, continuous short buzz.

Step 3:Power off,wire jumper reconnect 1/2,re-up electricity,initialize programming code and managed card Adding finished

## THE USE OF MANAGED CARD

Add User Card : In the standby status,read added Card,then read the user Card want to add at the end ,read added Card to log out .

Delete User Card: In the standby status,read deleted Card,then read the user card want to delete,at the end read deleted Card to log out .

Delete all Users:In the standby status,read deleted Card,then read the added card,at the end to read deleted Card to log out . This operation will delete all users,include personal password user(not include public password)

## USER NO. INTRODUCTIONS

The machine default user ID is contained by 4 digits(for example,0001),add a user each time ,the user number will add 1 automatic,when remove a single user,this number will be emptied,will not influence the serial number of new added user(the new added user number will be the last added user number +1),after execute the delete all user command(the programming command 40 or use Managed Card),the user number will re-start from 0001.Public access password doesn't occupy the User Serial Number.

## MODIFY THE CORRESPONDING PERSONAL ACCESS PASSWORD OF CARD

Set the open mode as "Card+ Password",user read card then input password and press"#",open successfully within 5 sec,long press "#" until the green light fast flash,meanwhile,input new password # repeat new password #,1 long buzz,the corresponding personal Access password of this card is modified successfully.

Extended operation	Add personal Access Password	#Programming Password#22NEW password#	Can set up multiple sets of personal password: Accessed by Password, input password then press#
	Add User Card(input Card Number)	#Programming Password#23#Manual input initial card number	The Card Number can be the 10 digits in the blank space on the left side of the Card or the 8 digits on the right side of the card, the machine identify automatic
	Add User Card(Continual Card Number)	#Programming Password#23#Manual input initial card number Card Quantity#	The Card quantity must be 4 digits(input 0020 can add 20 cards at one-time)
	Add "Card+Password" User	#Programming Password#3Read Card NEW password#	Modify the corresponding password, please refer to the instruction of modifying corresponding personal Access password
	Delete User(input ID No.)	#Programming Password#42User ID	The User ID must be 4 digits, for example 0001, 0020, etc. Details shown in User ID Instruction
	Delete User(input Card No.)	#Programming Password#43 Manual input card number	The Card Number can be the 10 digits in the blank space on the left side of the Card or the 8 digits on the right side of the card, the machine identify automatic
	Delete User(input password)	#Programming Password#44 Personal Access password#	Delete the corresponding User of this card, and the corresponding Card number of this password will be delete as well
	Delete all Password User	#Programming Password#45 1111#	All the User that only accessed by personal Password will be delete
	Modify Relay unlocking time	#Programming Password# 5 x x#	"xx" is 2 digits, Up to 99 seconds, if input 00, the Relay signal Instantaneous output(0.2sec)
	Set the open mode	#Programming Password# 6 x x #	"xx" can be 01(Read Card); 02(Read Card or Password); or 03(Card+Password)
	Card reader function	#Programming Password#604#	Read card under this Mode, WG Interface will output WG26 Signal, this product can be used as Card reader(only apply to some models)
	Set Security Function	#Programming Password#7xx#	"xx" can be 01 or 02(Security feature Close /Open)/03 or 04(Tamper alarm Close/Open)(only apply to some models)
	Set Backlight Mode	#Programming Password#8xx#	xx" can be 01(Light NC)/02(light NO)/03(Auto)(only apply to some models)
	Reset machine factory Settings	#Programming Password#899#	All machine parameters will be restore to Factory default